

RLink User Guide for use with Nissan CONSULT 4 R2R Software


101200N[®]




Download the Necessary TOPDON Software

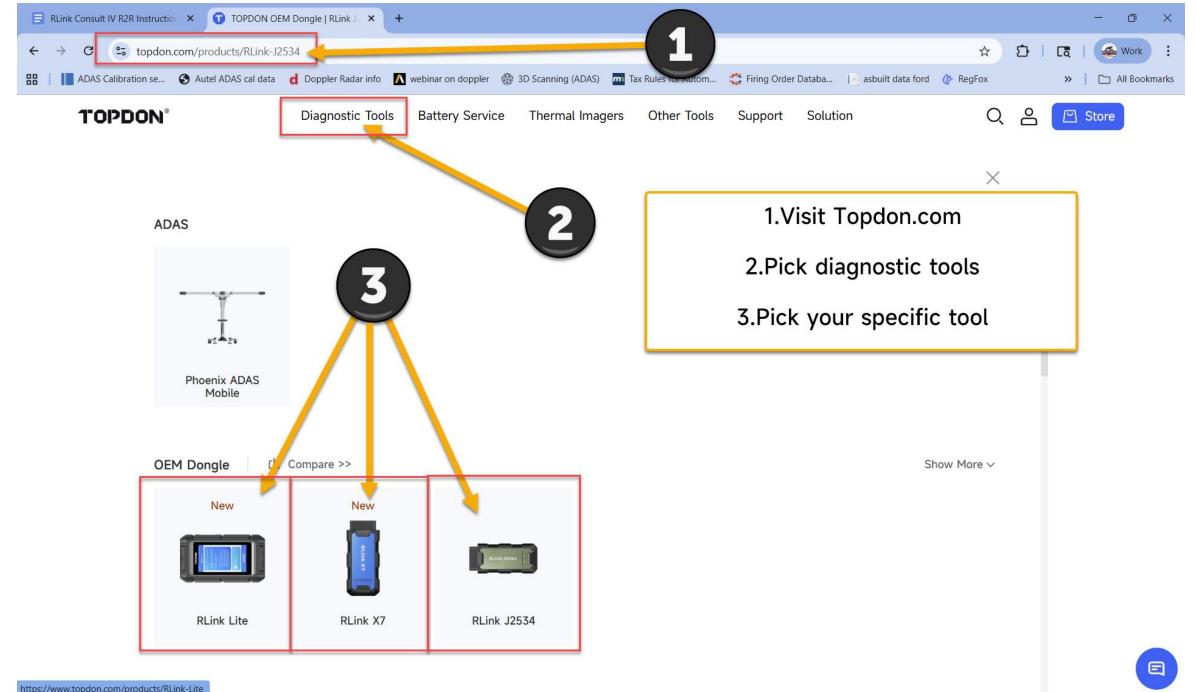


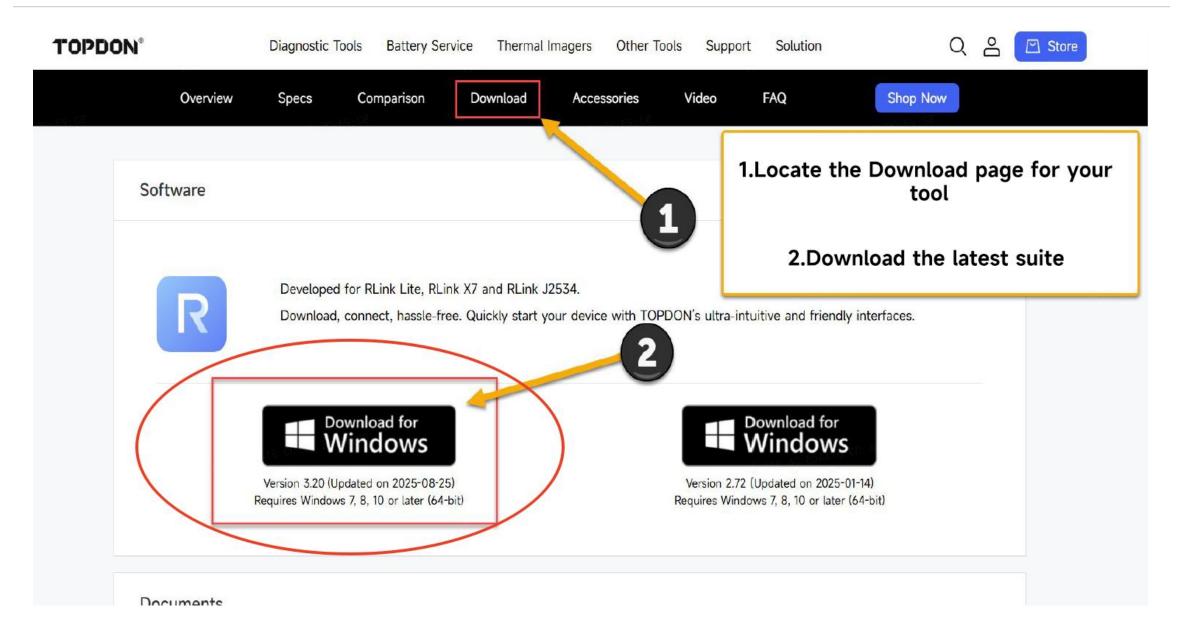


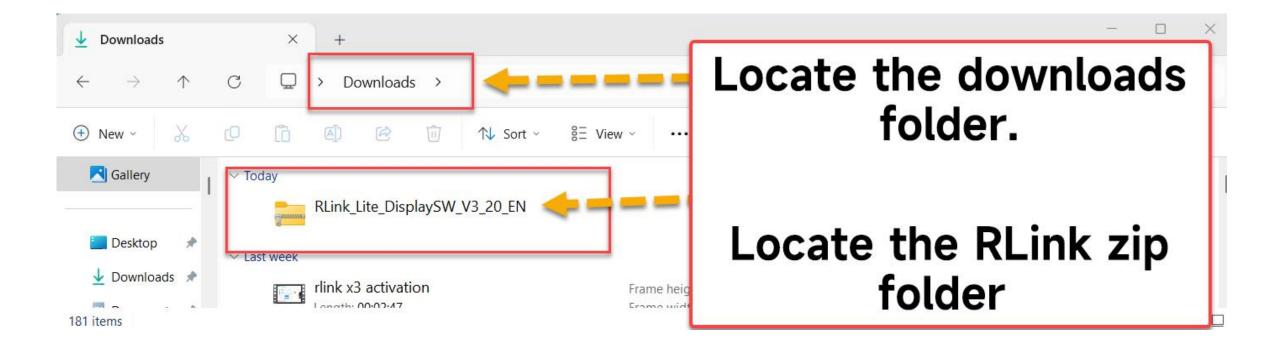


Extract and Install the RLink Suite

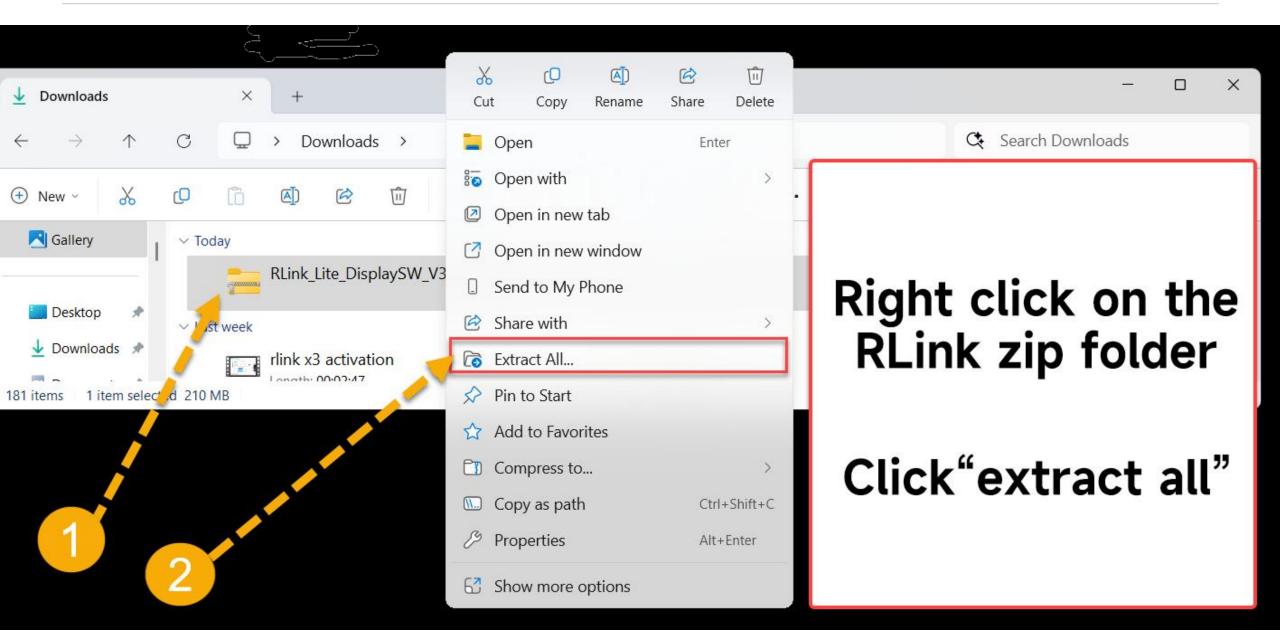


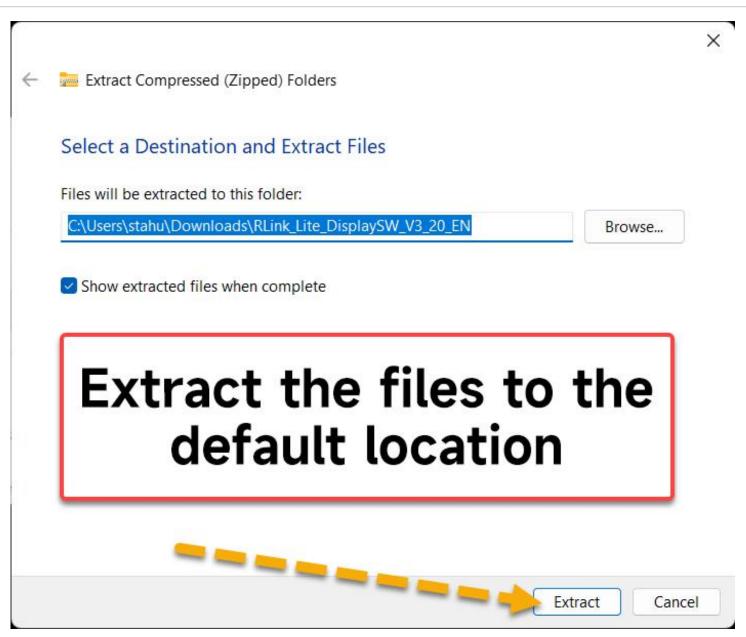

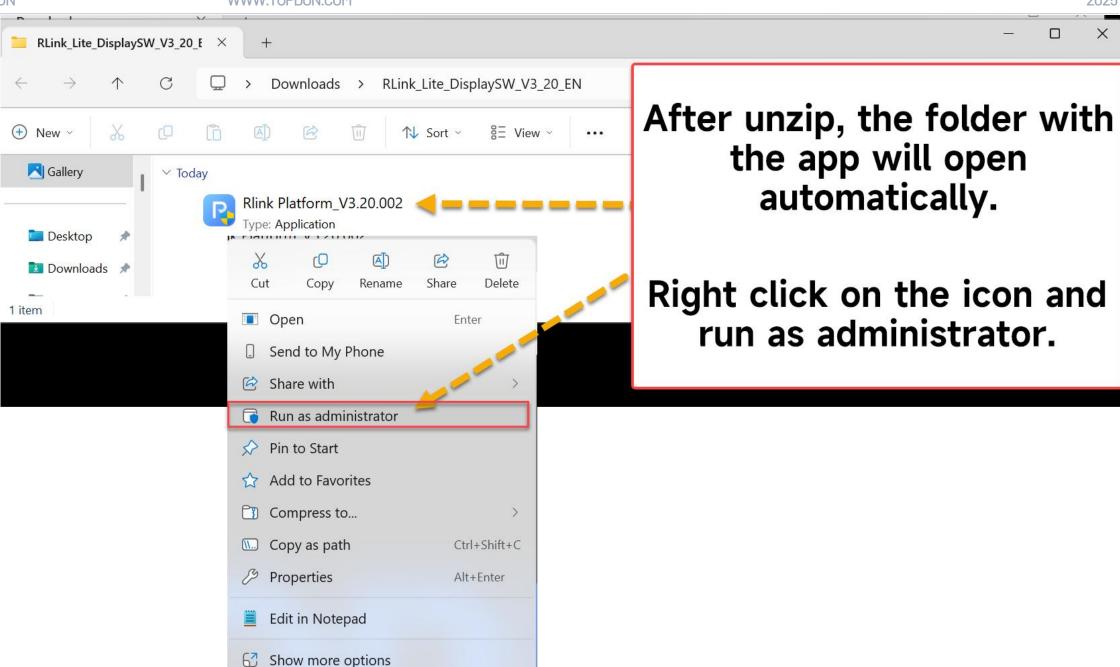


Follow all of the prompts

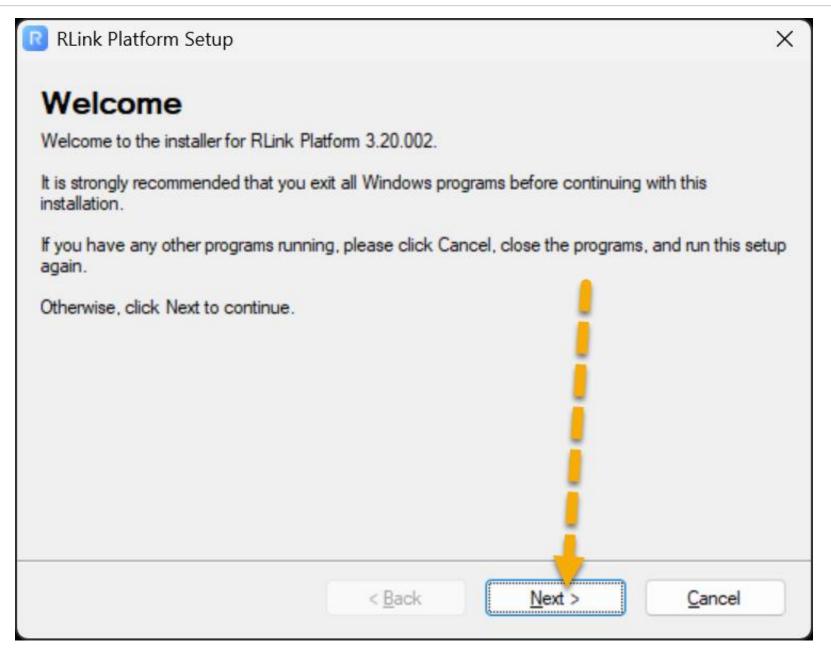


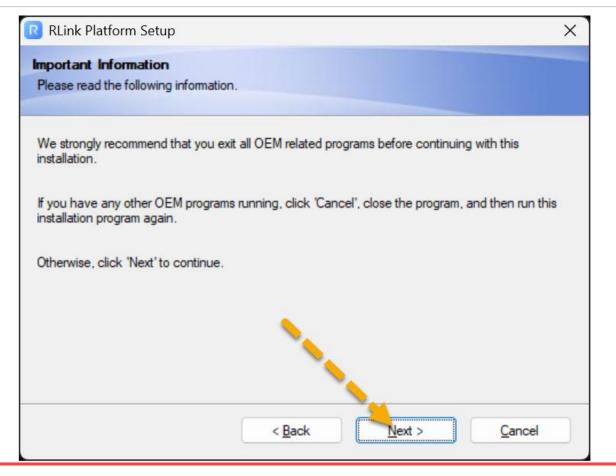



Make sure all other software is closed before proceeding and ALL ANTIVIRUS is disabled!!!

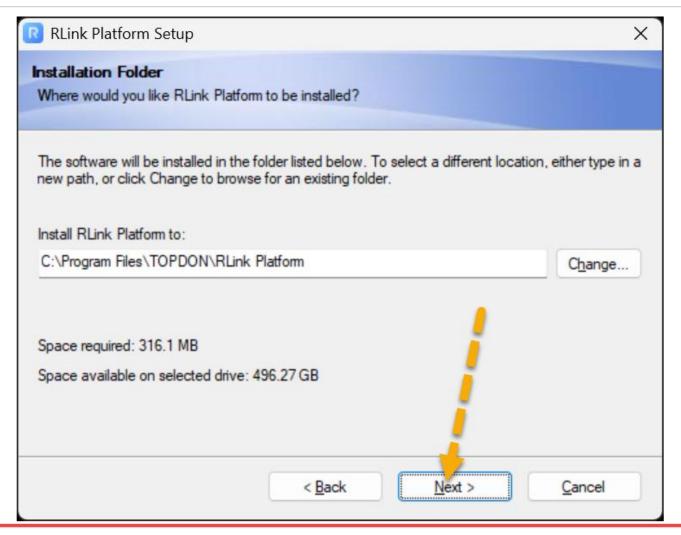



Extract to the default folder

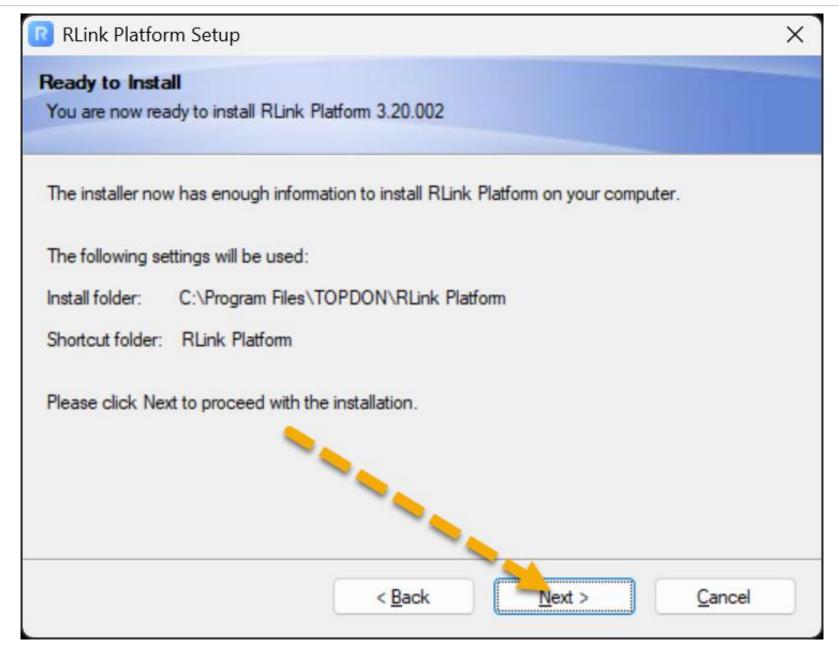

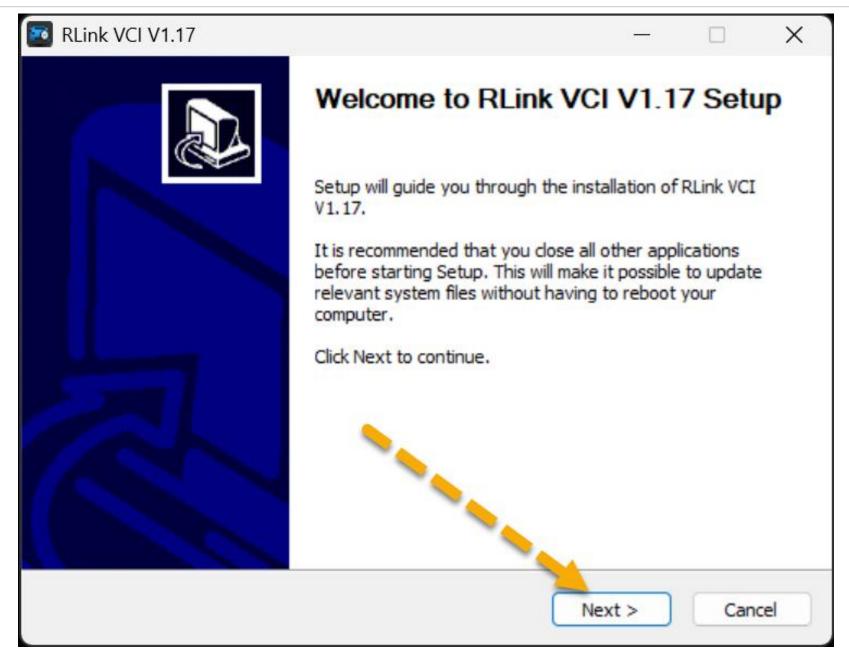

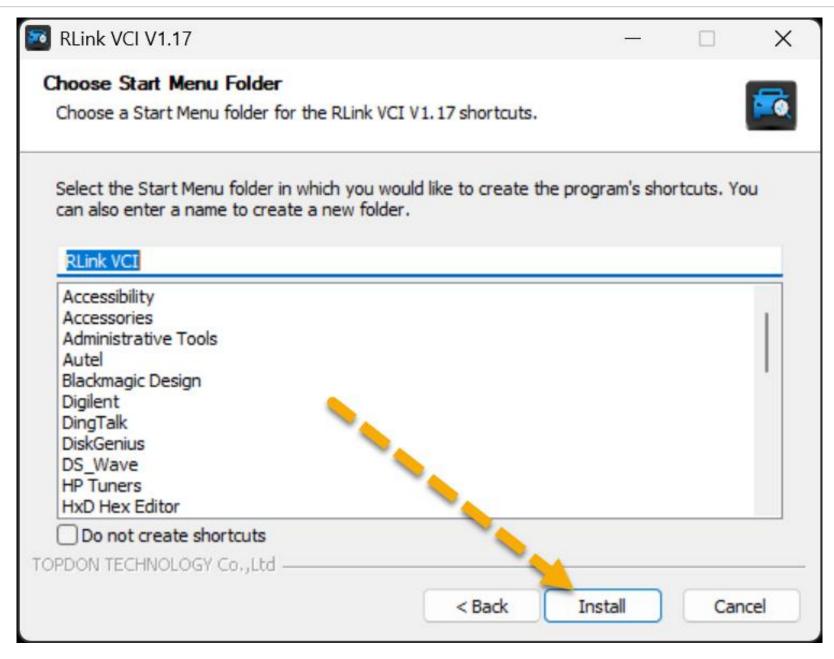

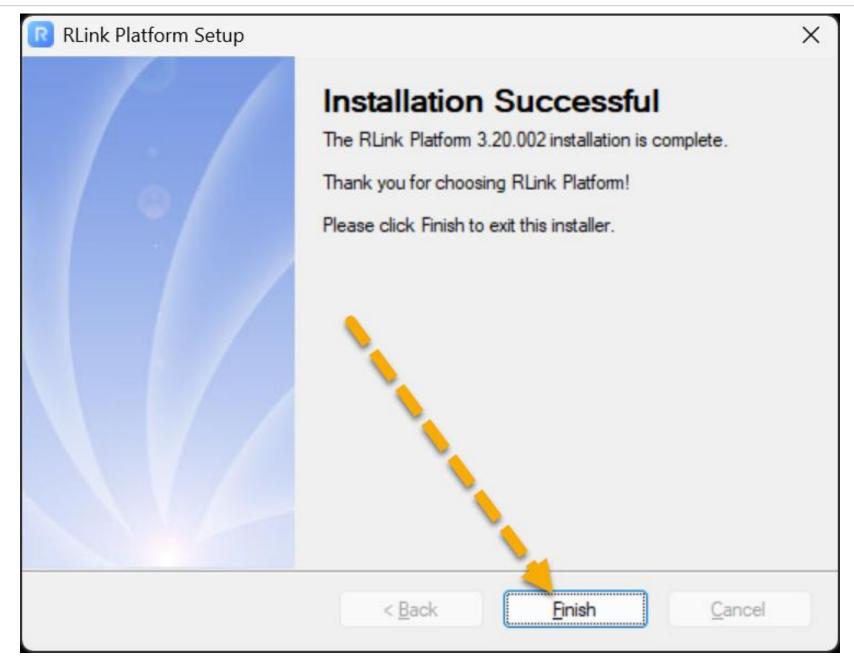

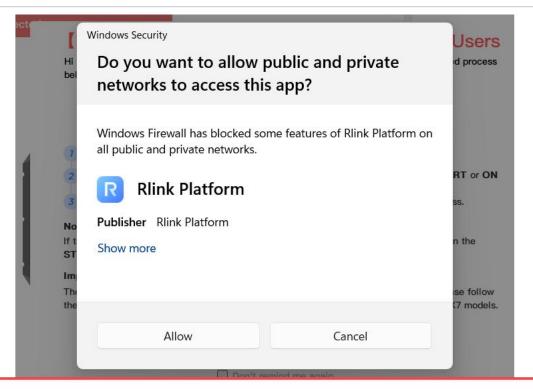



If you receive this prompt at ANY point in the install or product use, your firewall is likely not fully disabled. This can create many problems when using the RLink AND OEM software.

Please correct this before proceeding!


Launch the App and Update RLink Firmware

Open the RLink Platform

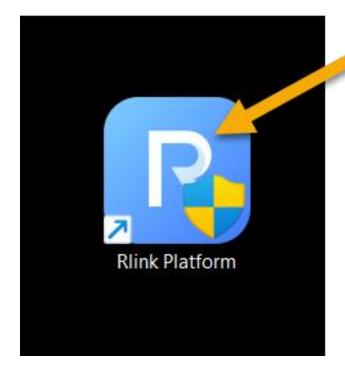

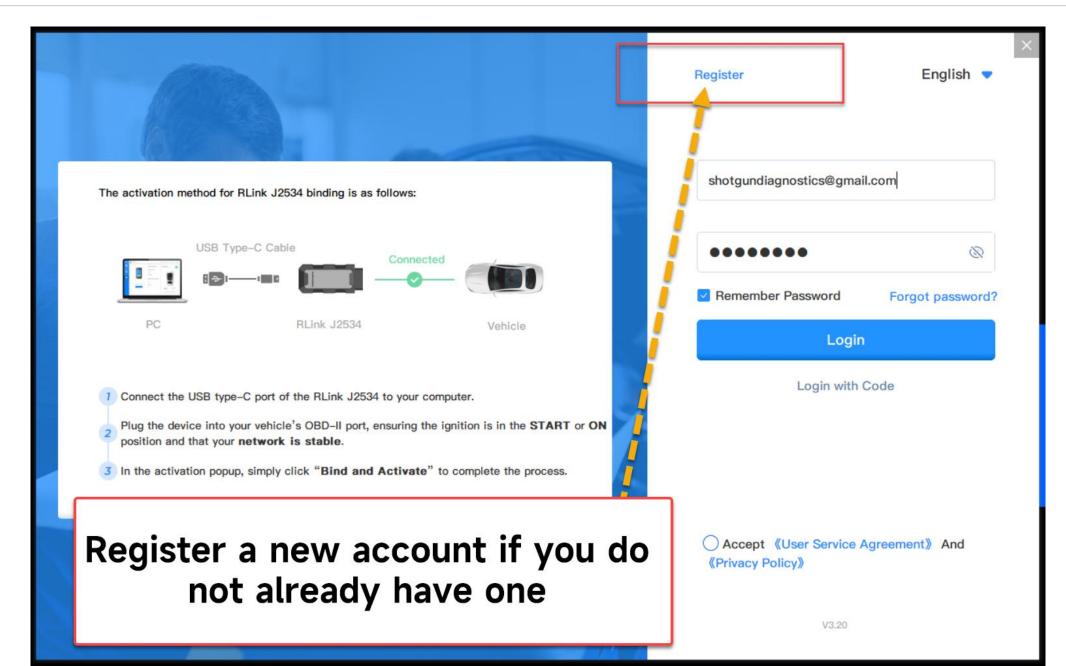



Connect the USB cable to your RLink, then connect the RLink to a Vehicle OBD Port OR AC Power (RLink Lite)

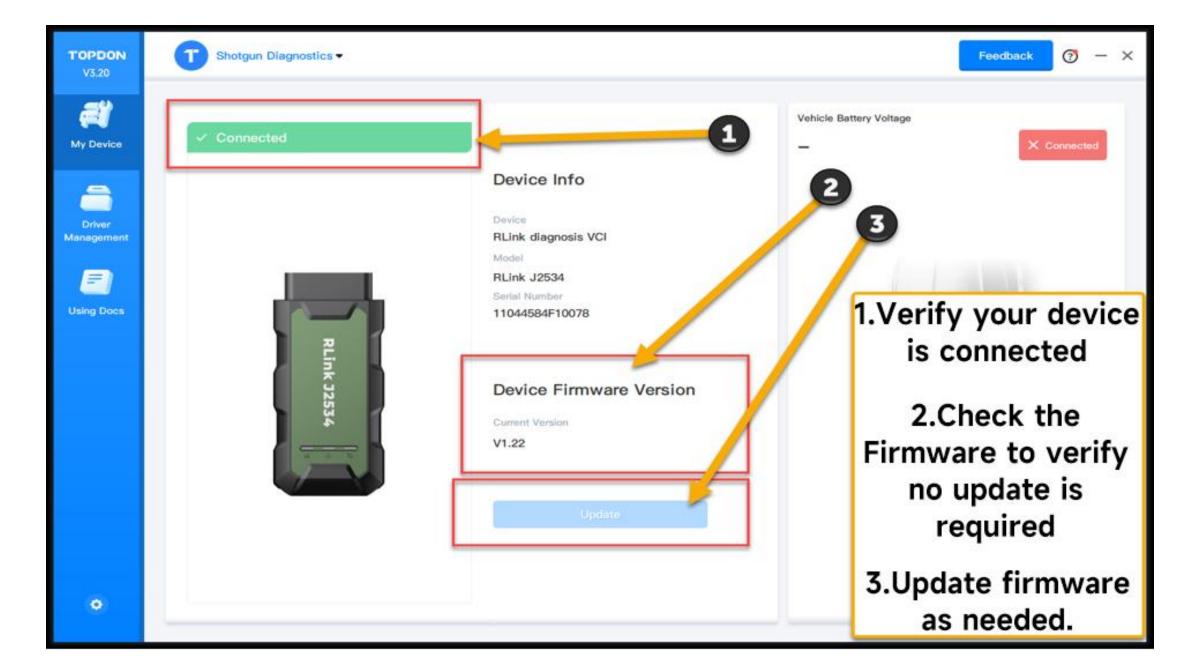


Install the Nissan Driver (If already installed, skip to the next step)



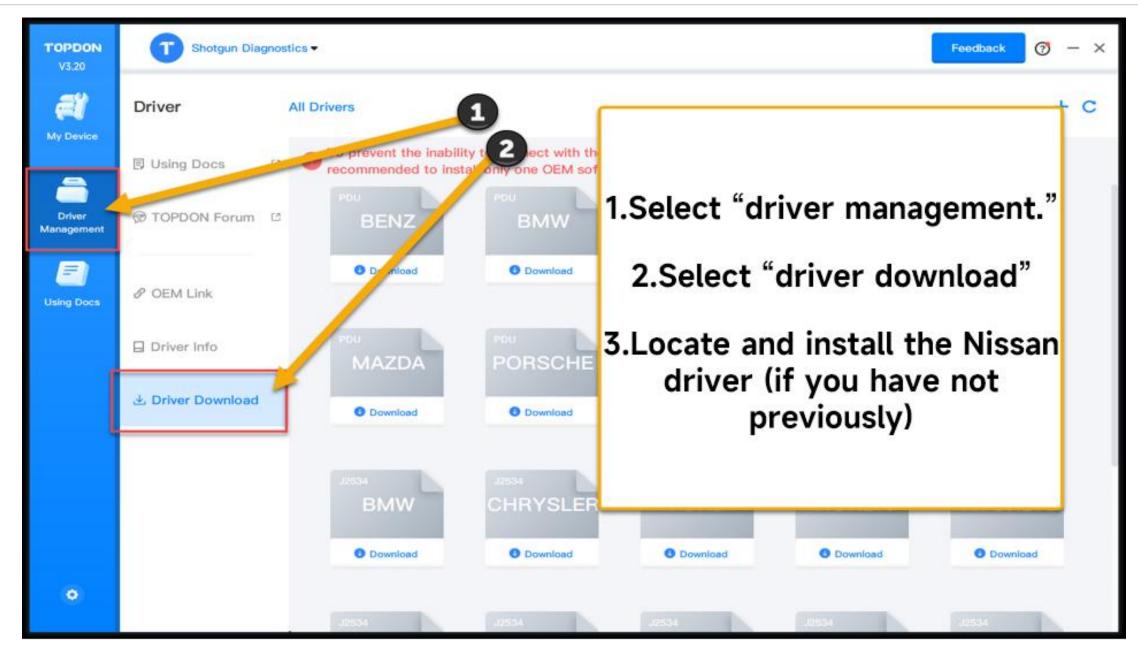


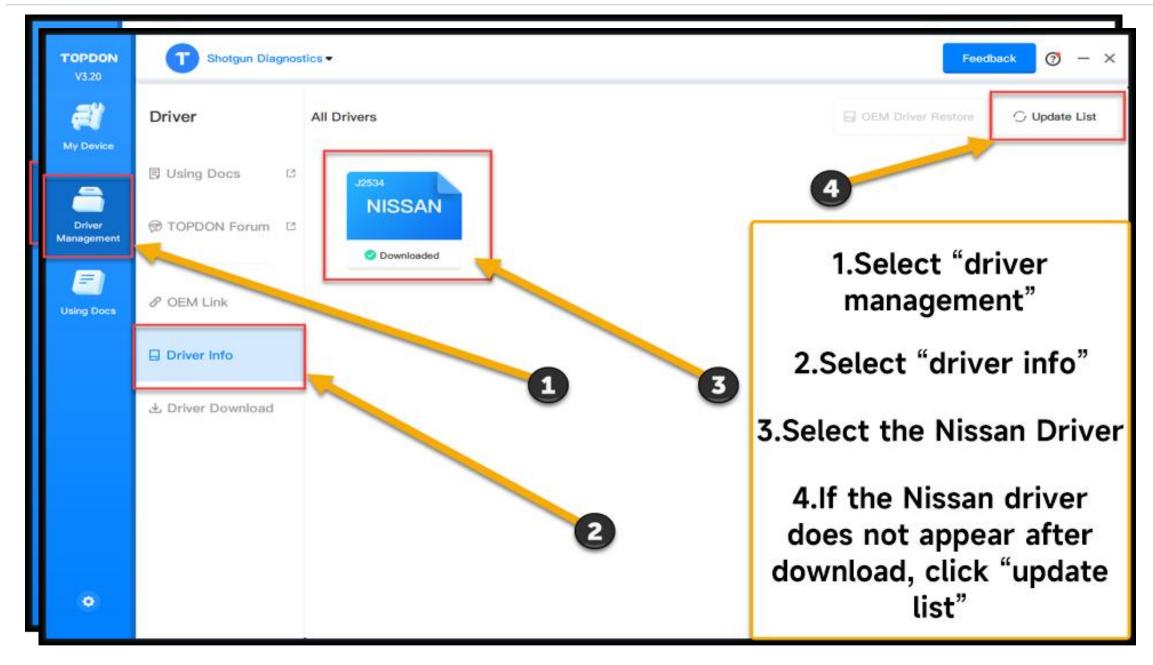


Update the Nissan Driver

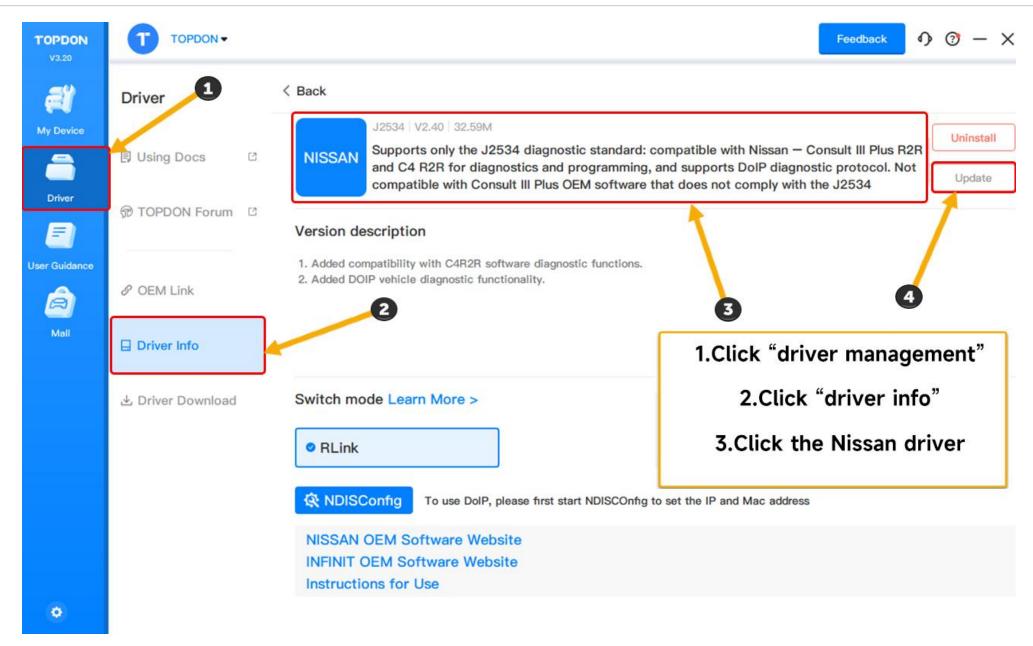


Open the NDIS Config Application

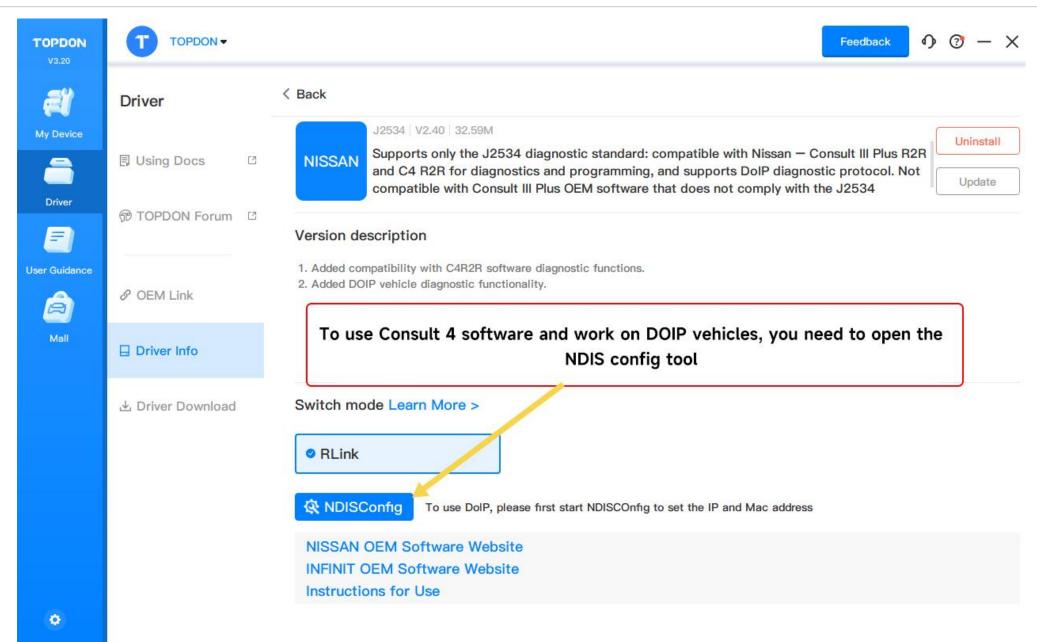


Configure the RLink for DOIP using the NDIS tool

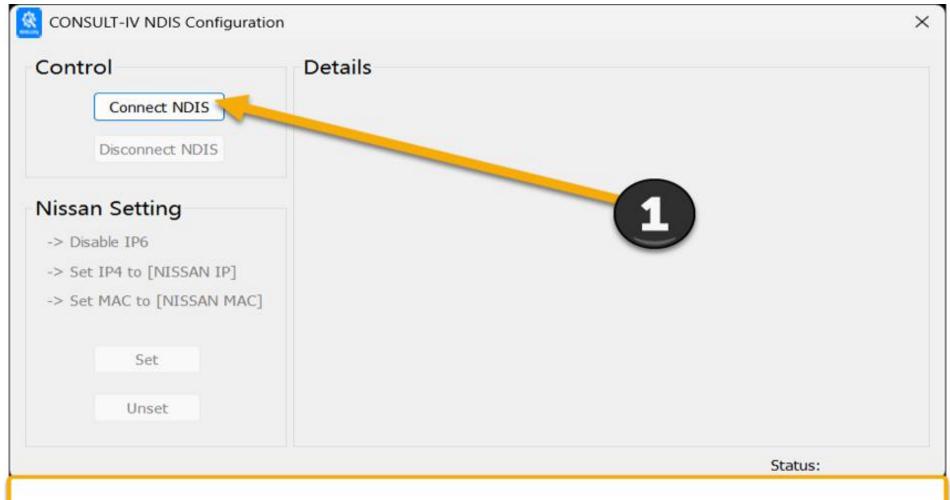

1.With the RLink powerde up and connected via USB, click "connect NDIS"

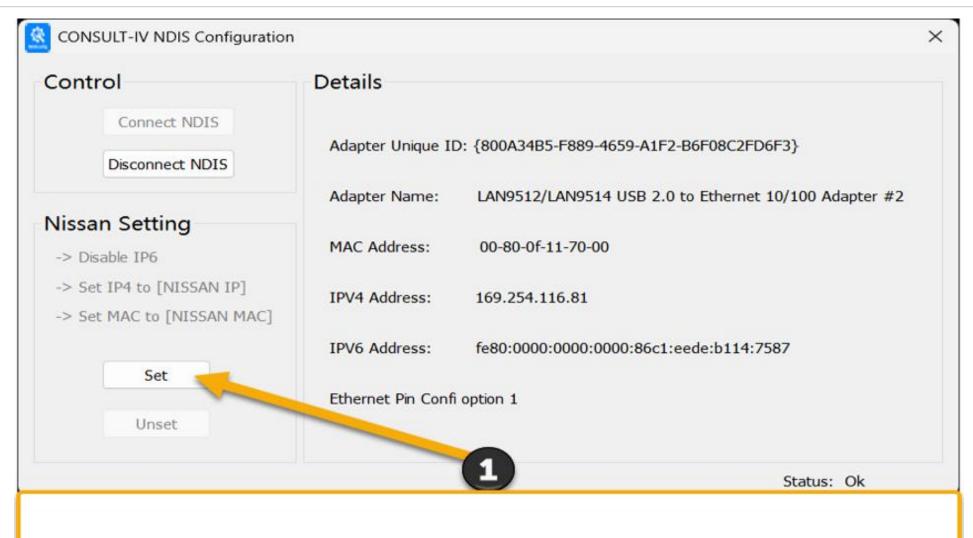

1. After successful connection, click "Set"

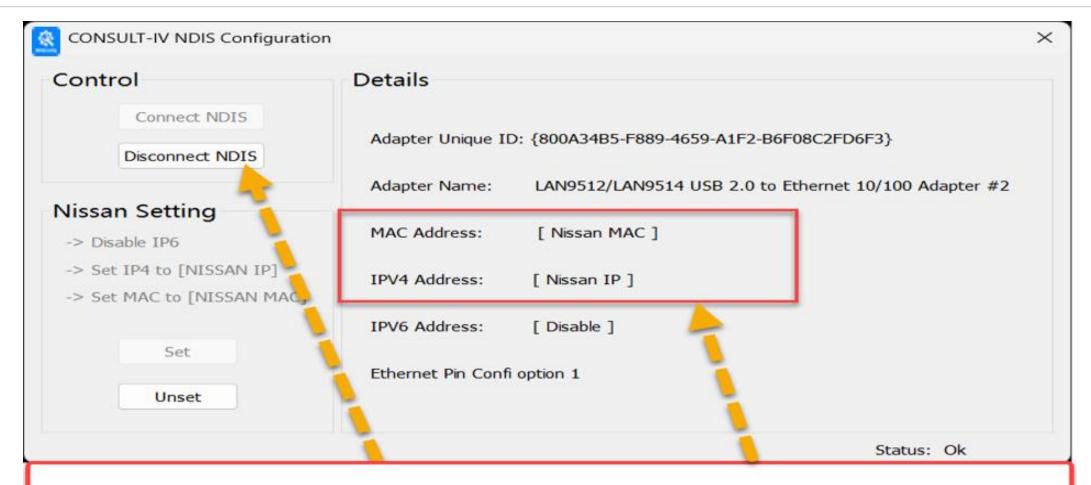


Once the IP has been set, disconnect the NDIS app




Launch Consult IV app


Login With Your Credentials


Set the VI (Vehicle Interface)

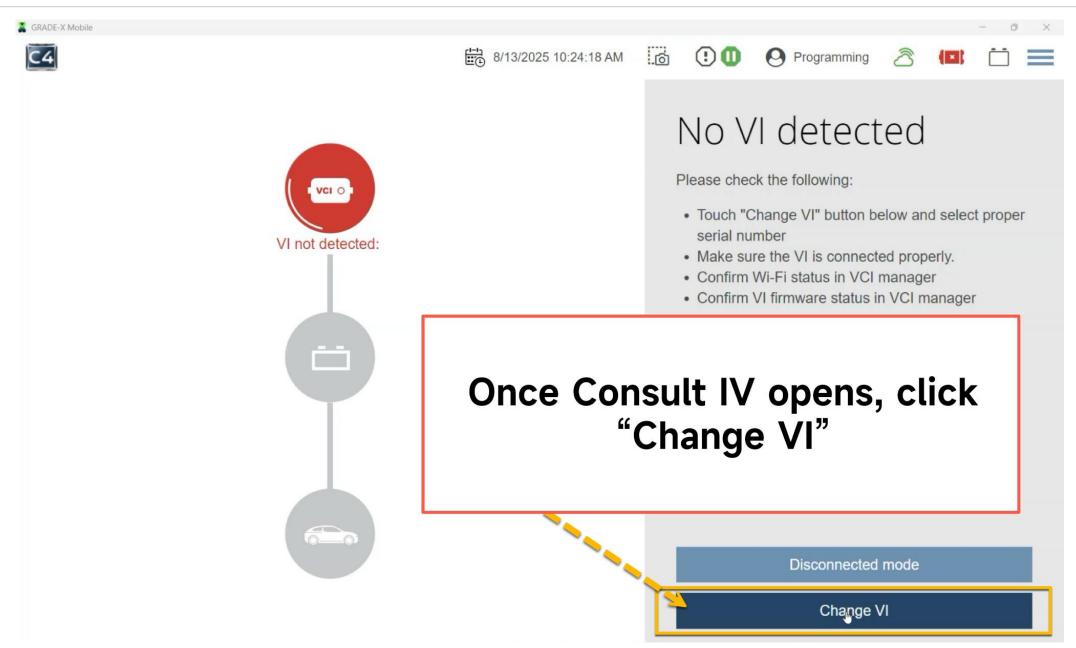


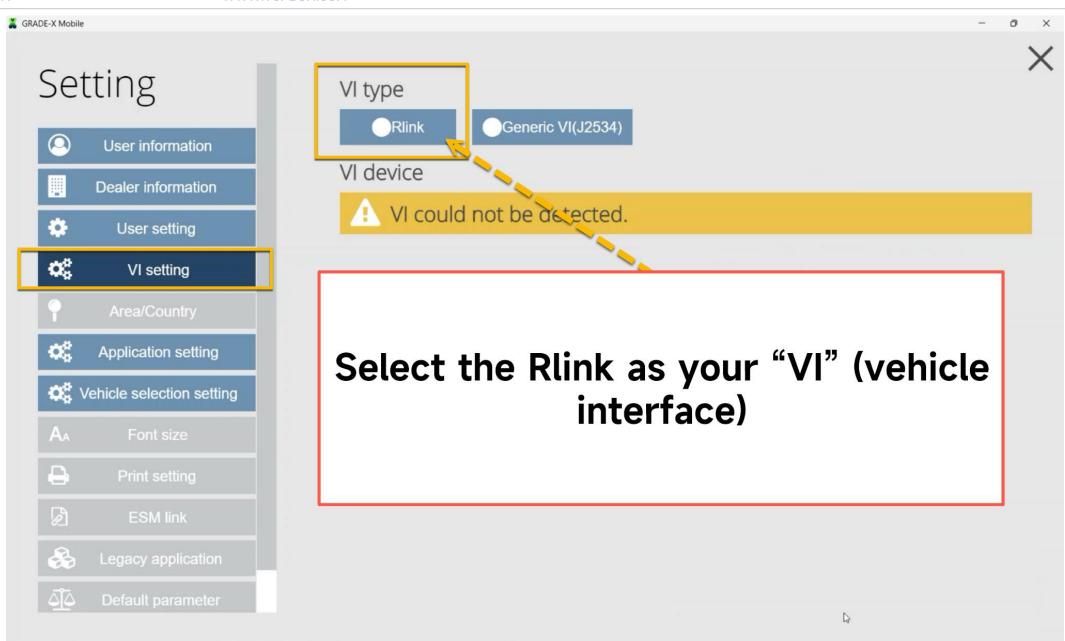





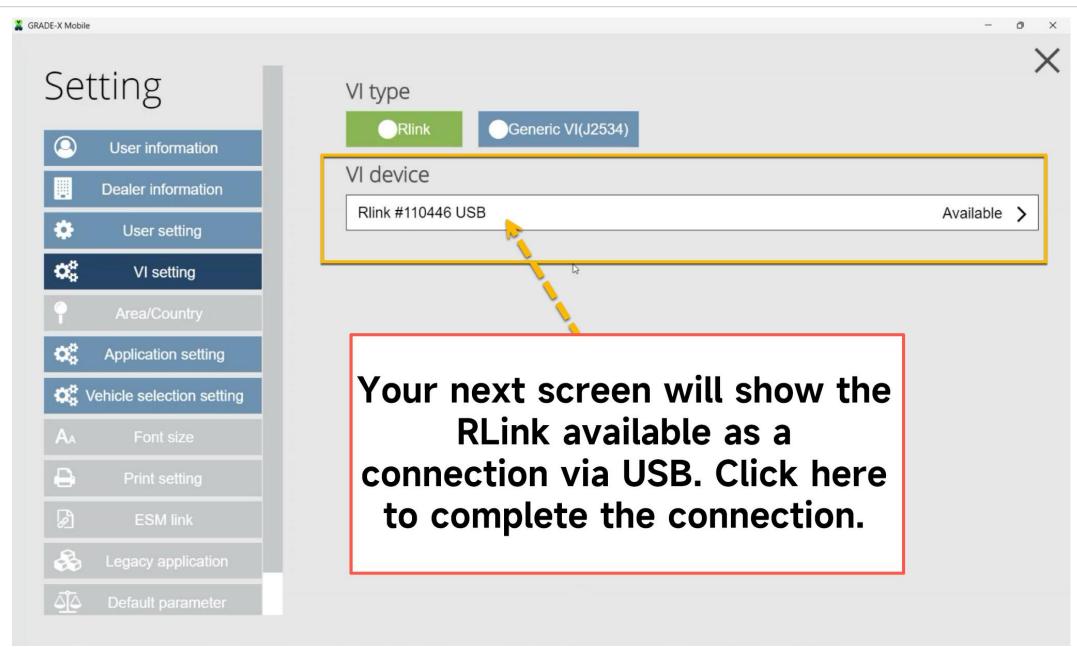

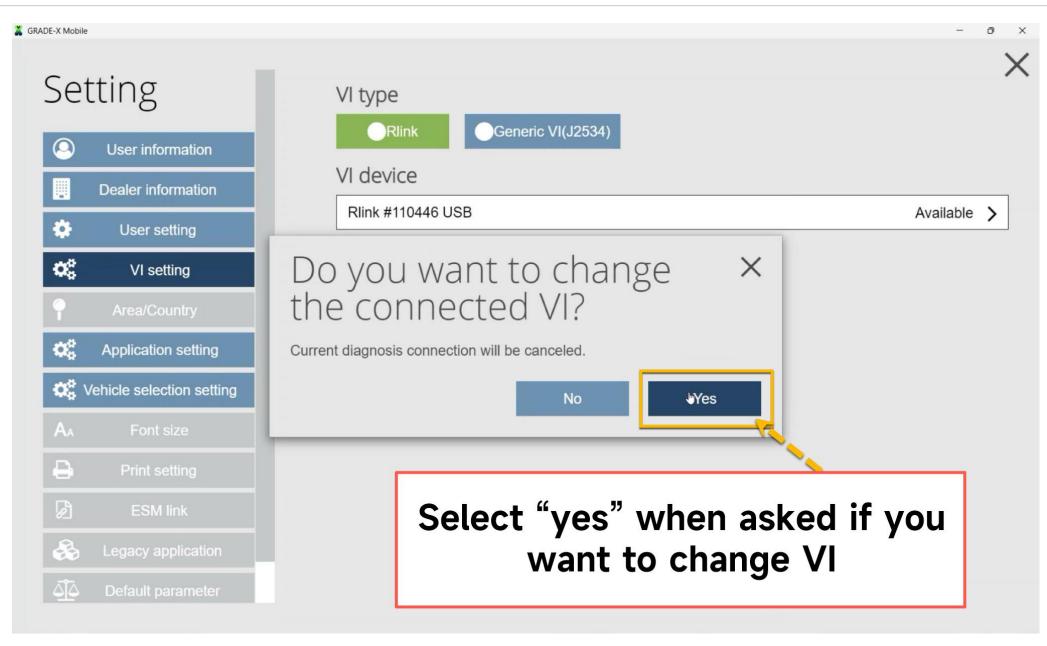

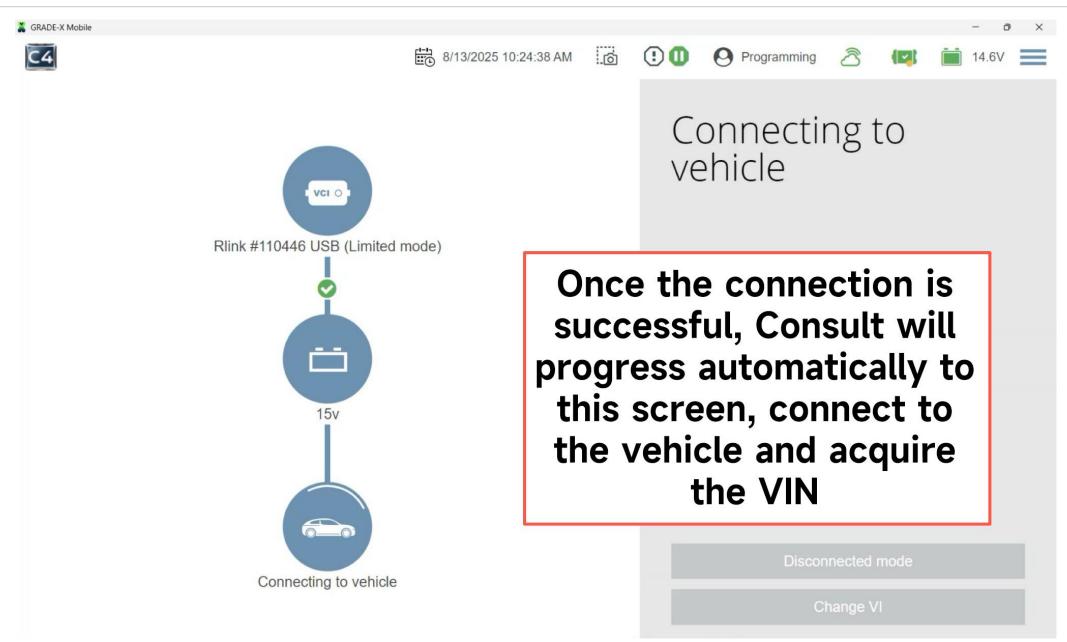

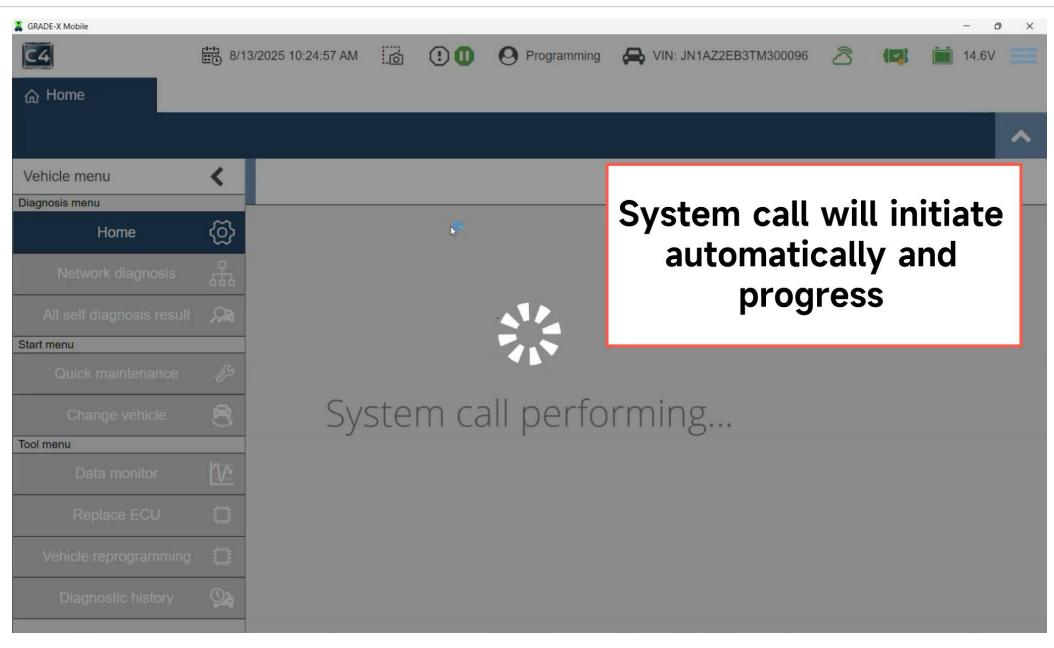


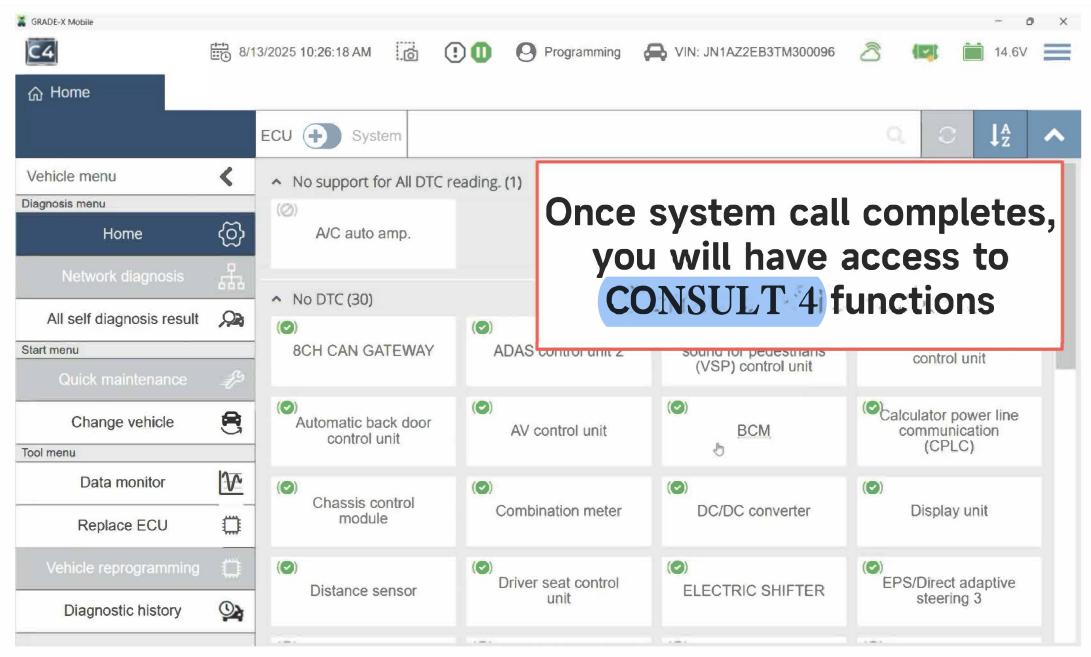

Post-Service:

Disconnect RLink DOIP


Open the NDIS Config Application

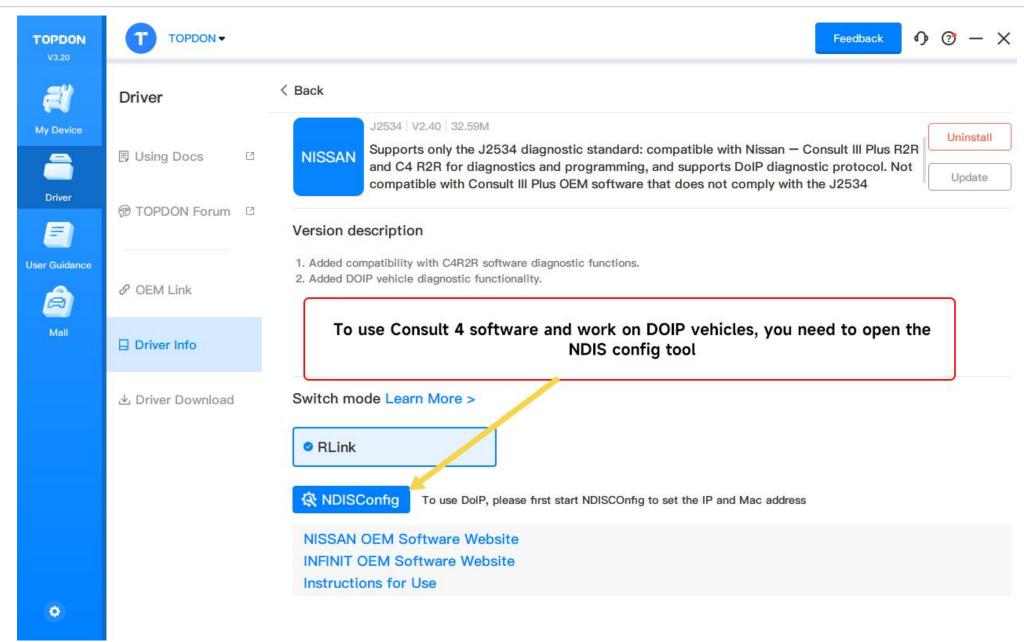


Switch off DOIP for the RLink



1.With the RLink powered up and connected via USB, click "connect NDIS"

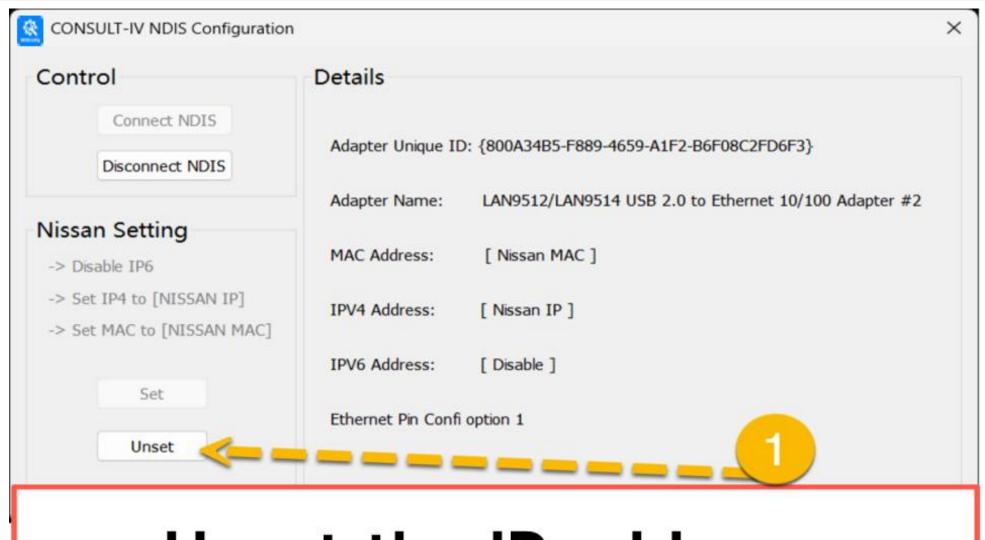

Unset the IP address

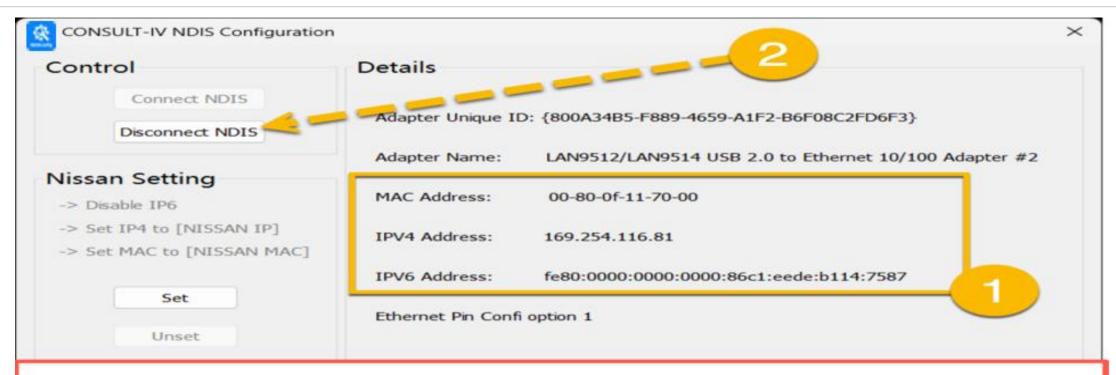

1.Watch for the IPv4, IPv6 and MAC to change back to generic.

2.Disconnect from the RLink

Resume Using the RLink for Other Vehicles/Tasks

RLink User Guide for use with Nissan Consult IV R2R Software

